

PRODUCT DESCRIPTION

PART # DP02747

Our Post Picker allows you to quickly and easily remove U-Channel and Square Sign Posts, as well as wood posts drilled with a few small holes. The tool applies 2+ ton of upward force when the handle is pushed down, causing the U-Channel or Square Sign Post to rise out of the ground. The Post Picker is made in the USA.





INSTRUCTIONS

- · "Ring the bell," hit the post to loosen fit in post sleeve or solid ground.
- Make sure base is flat on the ground and unit is as tight to post as possible. If using on very soft ground, place a board under the base.
- · Engage shear pin in post hole, making sure that the handle is about hip height.
- Pin must be inserted <u>completely</u> into post hole so no amount of pin is visible between head of unit and post. If pin is not fully engaged it may damage/bend pin and Post Picker will not work optimally.
- · Once pin is fully engaged apply downward pressure on handle.
- · For maximum life of your shear pin, only operate in hip to knee range (or one post hole/inch at a time.)
- · Because of the Post Picker's unique design, it will only take a small number of cycles to remove the post!

NEVER PLACE A BAR (CHEATER BAR) ON HANDLE TO GAIN MORE LEVERAGE, THIS WILL DAMAGE THE UNIT AND VOID THE WARRANTY!

The specifications provided are approximate and subject to change. Graphics and illustrations are intended for illustrative purposes only.

